



CANON 0775B001 Papier Canon GP501 Photo Paper Glossy 210g A4 100ark

Indeks: **46234** Producent: **CANONDeutschland GmbH** Kod producenta: **0775B001**

Cena: **139.90 zł**

Opis

CANON 0775B001 Papier Canon GP501 Photo Paper Glossy 210g A4 100ark

Producent: CANONDeutschland GmbH

Producent: CANON; Klasa produktu: Media do drukarek (papiery, folie...); Rodzaj nośnika: papier; Typ nośnika: foto, błyszczący; Format nośnika: A4; Gramatura: 210 g/m²; Ilość arkuszy: 100 szt./opak.; Ilość sztuk/kompletów w zestawie: 1 szt.; Uwagi: Kompatybilność z: , MAXIFY MB2050, MAXIFY MB5150, MAXIFY iB4050, MAXIFY iB4150, PIXMA G3510, PIXMA G4410, PIXMA G4500, PIXMA MG2440, PIXMA MG3050, PIXMA MG3053, PIXMA MG3650, PIXMA MG5240, PIXMA MG6340, PIXMA MG6450, PIXMA MG7550, PIXMA MG8250, PIXMA MG8251, PIXMA MP150, PIXMA MP260, PIXMA MP520, PIXMA MP520x, PIXMA MP600, PIXMA MP630, PIXMA MX320, PIXMA MX515, PIXMA TS204, PIXMA TS3150, PIXMA TS5053, PIXMA iP1700, PIXMA iP2500, PIXMA iP2600, PIXMA iP4940, PIXMA iP8750, PIXMA iP90v, PIXMA iX7000, MAXIFY MB2150, MAXIFY MB2750, PIXMA G1400, PIXMA G3411, PIXMA G4411, PIXMA MG2150, PIXMA MG2450, PIXMA MG2540S, PIXMA MG2550, PIXMA MG2940, PIXMA MG3052, PIXMA MG3150, PIXMA MG3550, PIXMA MG4240, PIXMA MG5340, PIXMA MG5750, PIXMA MG6150, PIXMA MG6640, PIXMA MG7150, PIXMA MG8250, PIXMA MP180, PIXMA MP210, PIXMA MP240, PIXMA MP280, PIXMA MP530, PIXMA MP550, PIXMA MP990, PIXMA MX330, PIXMA MX725, PIXMA MX860, PIXMA Pro9000, PIXMA TS5050, PIXMA TS6050, PIXMA TS9050, PIXMA iP1200, PIXMA iP2850, PIXMA iP4600x, PIXMA iP7240, PIXMA iP90, PIXMA G2411, PIXMA G2510, PIXMA G4400, PIXMA G4510, PIXMA MG2555S, PIXMA MG3040, PIXMA MG3250, PIXMA MG5650, PIXMA MG6140, PIXMA MG6240, PIXMA MG6852, PIXMA MG6853, PIXMA MG7740, PIXMA MG7753, PIXMA MG8240, PIXMA MP190, PIXMA MP220, PIXMA MP272, PIXMA MP460, PIXMA MP480, PIXMA MP492, PIXMA MP499, PIXMA MX375, PIXMA MX410, PIXMA MX475, PIXMA MX494, PIXMA MX495, PIXMA MX715, PIXMA MX884, PIXMA Pro9000 Mark II, PIXMA TS9040, PIXMA iP110 wb, PIXMA iP1800, PIXMA iP1900, PIXMA iP4950, PIXMA iP5000, PIXMA iX4000, MAXIFY MB2155, MAXIFY MB5050, MAXIFY MB5350, MAXIFY MB5450, MAXIFY MB5455, PIXMA G1500, PIXMA G1510, PIXMA MG3240, PIXMA MG5450, PIXMA MG5640, PIXMA MG5740, PIXMA MG6840, PIXMA MG6850, PIXMA MG7750, PIXMA MP140, PIXMA MP170, PIXMA MP450, PIXMA MP450x, PIXMA MP495, PIXMA MP620B, PIXMA MP800, PIXMA MP800R, PIXMA MX394, PIXMA MX395, PIXMA MX534, PIXMA MX894, PIXMA TR4540, PIXMA TR4550, PIXMA TS5040, PIXMA TS6051, PIXMA TS8040, PIXMA TS8050, PIXMA TS8052, PIXMA TS9540, PIXMA TS9541C, PIXMA iP2700, PIXMA iP4500x, PIXMA iX5000, MAXIFY MB5340, MAXIFY MB5440, PIXMA G2410, PIXMA G2500, PIXMA G3400, PIXMA MG2140, PIXMA MG3640, PIXMA MG3650S, PIXMA MG6250, PIXMA MG6851, PIXMA MG7540, PIXMA MG7752, PIXMA MP510, PIXMA MP540, PIXMA MP600R, PIXMA MP610, PIXMA MX340, PIXMA MX420, PIXMA MX434, PIXMA MX455, PIXMA MX514, PIXMA MX524, PIXMA MX535, PIXMA MX885, PIXMA MX895, PIXMA TR4551, PIXMA TS5051, PIXMA TS5055, PIXMA iP1300, PIXMA iP2200, PIXMA iP3000, PIXMA iP4200, PIXMA iP4300, PIXMA iP4500, PIXMA iP4600, PIXMA iP4840, PIXMA iP4850, PIXMA iP5200R, PIXMA iP6700D, PIXMA iP8500, MAXIFY MB2140, MAXIFY MB5155, MAXIFY iB4140, PIXMA G1410, PIXMA MG2545S, PIXMA G3410, PIXMA MG3140, PIXMA MG3540, PIXMA MG4150, PIXMA MG5440, PIXMA MG5751, PIXMA MG5752, PIXMA MG6240, PIXMA MG6251, PIXMA MG6440, PIXMA MG6650, PIXMA MG8252, PIXMA MP230, PIXMA MP252, PIXMA MP270, PIXMA MP500, PIXMA MP540x, PIXMA MP810, PIXMA MP830, PIXMA MP980, PIXMA MX700, PIXMA TS205, PIXMA TS304, PIXMA TS3151, PIXMA TS6052,

PIXMA TS9551C, PIXMA iP110, PIXMA iP2840, PIXMA iP3600, PIXMA iP4000, PIXMA iP4000R, PIXMA iP4200x, PIXMA iP4700, PIXMA iP7250, PIXMA iX6540, PIXMA iX6840, MAXIFY MB2350, MAXIFY MB5040, MAXIFY MB5140, MAXIFY iB4040, PIXMA G1411, PIXMA G2400, PIXMA MG2240, PIXMA MG2540, PIXMA MG2550S, PIXMA MG2950, PIXMA MG5140, PIXMA MG5250, PIXMA MG5350, PIXMA MG5540, PIXMA MG6350, PIXMA MG8150, PIXMA MP160, PIXMA MP250, PIXMA MP470, PIXMA MP490, PIXMA MX454, PIXMA MX474, PIXMA MX525, PIXMA MX714, PIXMA MX870, PIXMA MX924, PIXMA TS6040, PIXMA TS9055, PIXMA iP3300, PIXMA iP5300, PIXMA iP6600D, MAXIFY MB2040, MAXIFY MB2340, MAXIFY MB2740, MAXIFY MB2755, PIXMA G3500, PIXMA MG2250, PIXMA MG3051, PIXMA MG3640S, PIXMA MG4140, PIXMA MG4250, PIXMA MG5150, PIXMA MG5550, PIXMA MG5753, PIXMA MG6250, PIXMA MG7140, PIXMA MG7751, PIXMA MG8140, PIXMA MG8240, PIXMA MP282, PIXMA MP560, PIXMA MP620, PIXMA MP640, PIXMA MX350, PIXMA MX360, PIXMA MX374, PIXMA MX435, PIXMA MX850, PIXMA MX925, PIXMA TS305, PIXMA TS8051, PIXMA TS8053, PIXMA TS9550, PIXMA iP100, PIXMA iP100 wb, PIXMA iP1600, PIXMA iP2702, PIXMA iP3500, PIXMA iP5200, PIXMA iP8740, PIXMA iX6550, PIXMA iX6850, PIXMA TS705, PIXMA TS704, PIXMA TR7540;
Więcej informacji: www.canon.pl [LINK]

Parametry

Kod producenta	BS0775B001AA
EAN	4960999293929
Stan	Nowy
Model	GP-501